


# Galaxy

## DX-66V2

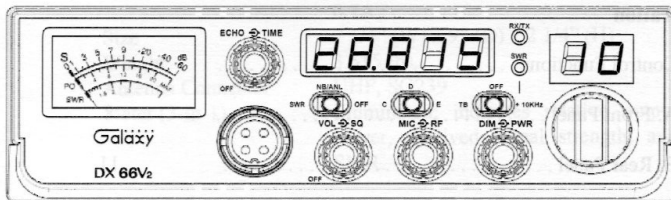

10 Meter Amateur Mobile Transceiver  
with Built in Frequency Counter

**OWNER'S MANUAL**

## TABLE OF CONTENTS

| Specification                          | Page |
|--|------|
| Installation                           | 2    |
| Location                               | 4    |
| Mounting the Connection                | 4    |
| Ignition Noise Interference            | 5    |
| Antenna                                | 5    |
| Tuning the Antenna for Optimum SWR     | 6    |
| External Speaker                       | 7    |
| <b>Operation</b>                       |      |
| Control Functions                      | 8    |
| A. Front Panel                         | 8    |
| B. Rear Panel                          | 11   |
| Press-To-Talk Microphone               | 12   |
| Operating Procedure to Receive         | 12   |
| Operating Procedure to Transmit        | 12   |
| Alternate Microphones and Installation | 13   |

## Specifications

### GENERAL

|                             |  |
|-----------------------------|--|
| Channels                    | 40 CH  |
| Frequency Range             | 28.765 ~ 29.205 MHz  |
| Frequency Control           | Phase Lock Loop (PLL) synthesizer.   |
| Frequency Tolerance         | 0.005%   |
| Frequency Stability         | 0.001%   |
| Operating Temperature Range | -30 °C to +50 °C.  |
| Microphone                  | Plug-in dynamic; with push-to-talk switch and coiled cord.   |
| Input Voltage               | 13.8V DC nominal, 15.9V max, 11.7V min.  |
| Size                        | (Positive or negative ground).   |
| Weight                      | <i>Transmit:</i> AM full mod, 5A.  |
| Antenna Connector           | <i>Receiver:</i> Squelched, 0.3A.  |
| Meter (3-in-1)              | Maximum Audio output, 0.7A.  |
|                             | 7 1/4" (W) x 9" (D) x 2 1/4" (H)   |
|                             | 3.615 lbs.   |
|                             | UHF, SO239   |
|                             | Illuminated; indicates relative output power, received signal strength, and SWR.                       |
| <b>TRANSMITTER</b>          |  |
| Power output                | AM: High 10 watts, Low 2 watts.  |
| Modulation                  | High- and low-level Class B, Amplitude Modulation: AM. Variable capacitance                            |
| Spurious Emissions          | 60 dB  |
| Frequency Response          | AM: 450 to 2500 Hz.  |
| Output Impedance            | 50 ohms, unbalanced.   |
| Output Indicators           | Meter shows relative RF output power and SWR. Transmit LED glows red when transmitter is in operation. |

## RECEIVER

|                                 |  |
|---------------------------------|--|
| Sensitivity                     | AM: 1 $\mu$ V for 10 dB (S+N)/N at greater than 1/2-watt of audio output.        |
| Selectivity                     | AM: 6 dB, 50 dB.<br>More than 65 dB.   |
| Image Rejection                 | AM: 10,695 MHz 1 <sup>st</sup> IF, 455 KHz 2 <sup>nd</sup> IF                    |
| IF Frequency                    | 60 dB AM   |
| Adjacent-Channel Rejection      | 45 dB adjustable for optimum signal reception.                                   |
| RF Gain Control                 | Less than 10 dB change in audio output for inputs from 10 to 100,000 microvolts. |
| Automatic Gain Control (AGC)    | Adjustable; threshold less than 0.5 $\mu$ V.                                     |
| Squelch                         | Switchable   |
| ANL                             | RF type  |
| Noise Blanker                   | 4 watts into 8 ohms.   |
| Audio Output Power              | 300 to 2800 Hz.  |
| Frequency Response              | 8 ohms, round.   |
| Built-in Speaker                | 8 ohms; disables internal speaker when connected.                                |
| External Speaker (Not Supplied) |  |

## Installation

### LOCATION

Plan the location of the transistor and microphone bracket before starting the installation. Select a location that is convenient for operation and does not interfere with the driver or passengers in the vehicles. In automobiles, the transistor is usually mounted below the dash panel, with the microphone bracket beside it.

### MOUNTING THE RADIO

Your transistor is supplied with a universal mounting bracket. When mounting the bracket and radio to your car, make sure it is mechanically strong. Also provide a good electrical connection to the chassis of the vehicle. Proceed as follows to mount the transistor:

1. After you have determined the most convenient location in your vehicle, hold the transistor with mounting bracket in the exact location desired. If nothing will interfere with mounting it in the desired position, remove the mounting bolts. Before drilling the holes, make sure nothing will interfere with the installation of the mounting bolts.
2. Connect the antenna cable plug to the standard receptacle on the rear panel. Most antennas are terminated with a type PL-259 plug and mate with the receptacle.
3. Connect the red DC power input wire (with the fuse) to +13.8V DC. This wire extends from the rear panel. In automatic installation, +13.8V DC is usually obtained from the accessory contact on the ignition switch. This prevents the set being left on accidentally when the driver leaves the car and also permits operating the unit without the engine running. Locate the accessory contact on most ignition switches by tracing the power wire from the AM broadcast receiver in the car.
4. Connect the black lead to -13.8V DC. This is usually the chassis of the car. Any convenient location with good electrical contact (remove paint) may be used.
5. Mount the microphone bracket on the right side of the transistor or near the transistor, using two screws supplied. When mounting in an automobile, place the bracket under the dash so the microphone is readily accessible.

## IGNITION NOISE INTERFERENCE

Use of a mobile receiver at low signal levels is normally limited by the presence of electrical noise. The primary source of noise in automobile installations is from the generator and ignition system in the vehicle. Under most operating conditions, when signal level is adequate, the background noise does not present a serious problem. Also, when extremely low level signals are being received, the transceiver may be operated with vehicle engine turned off. The unit requires very little current and therefore will not significantly discharge the vehicle battery.

Even though the transceiver has ANL and NB controls, in some installation ignition interference may be high enough to make good communications impossible. The electrical noise may come from several sources. Many possibilities exist and variations between vehicles require different solutions to reduce the noise.

## ANTENNA

A vertically polarized, quarter-wavelength whip antenna provides the most reliable operation and greatest range. Shorter, loaded-type whip antennas are more attractive, compact and adequate for applications where the maximum possible distance is not required. Also, the loaded whips do not present the problems of height imposed by a full quarter-wavelength whip.

Mobile whip antennas utilize the metal body of the vehicle as a ground plane. When mounted at a corner of the vehicle they are slightly directional, in the direction of the body of the vehicle. For all practical purpose, however, the radiation pattern is nondirectional. The slight directional characteristic will be observed only at extreme distance. A standard antenna connector (type SO239) is provided on the transceiver for easy connection to a standard PL 259 cable termination.

If the transceiver is not mounted on a metal surface, it is necessary to run a separate ground wire from the unit to a good metal electrical ground in the vehicle. When installed in a boat, the transceiver will not operate at maximum efficiency without a ground plate, unless the vessel has a steel hull.

Before installing the transceiver in a boat, consult your dealer for information regarding an adequate grounding system and prevention of electrolysis between fittings in the hull and water.

## TUNNING THE ANTENNA FOR OPTIMUM SWR

Since there is such a wide variety of base and mobile antennas, this section will strictly concern itself to the various types of mobile adjustable antennas.

Because the antenna length is directly related to the channel frequency, it must be tuned to resonate optimally all 40 channels of the transceiver. Channel 1 requires a longer antenna than Channel 40 because it is lower in frequency.

Due to the various methods of adjusting antennas for proper SWR we have chosen what we think is the optimum method:

### A. Antennas with adjustment screws (set screws)

1. Start with the antenna extended and tightens the set screw lightly enough so that the antenna can be lightly tapped with your finger for easy adjustment.

2. Set your transceiver to Channel 21. @ Low band D or Hi band A. Press the PTT (push-to-talk) switch, and tap the antenna (making it shorter). The SWR meter will show a lower reading each time the antenna is tapped. By continuing to shorten the antenna you will notice the SWR reading will reach a low print and then start rising again. This means that you have passed the optimum point for Channel 21. Extend the antenna a short distance and again follow the procedure above.

When the lowest point has been reached, switch to Channel 1 @ Low band A or Hi band A and then to Channel 40 @ Low band D or Hi band D and compare SWR readings. They should be almost equal.

### B. Antennas which must be cut to proper length.

1. Follow the same procedure as above, but adjust the length by cutting in 1/8" increments until a good match is obtained.
2. *Be very careful not to cut too much at one time, as one it is cut, it can no longer be lengthed.*
3. The whip is easily cut by filing a notch all the way around and breaking the piece off with pliers.

## NOTE

THE PROPER SETTING IS ACHIEVED WHEN THE SWR IS 1.5 OR BELOW, AND WHEN IT HAS THE SAME READING FOR CHANNELS LOW BAND A1 AND HI BAND D40.

If you are having difficulties in adjusting your antenna, check the following:

- A. All doors must be closed when adjusting the antenna.
- B. Make sure the antenna base is grounded.

- C. Check your coaxial cable routing (it may be pinched when routed into the car).
- D. Try a different location on your car (keeping in mind the radiation pattern you wish)
- E. Is the antenna perfectly vertical?
- F. Try a different location in your neighborhood. Stay away from large metal objects when adjusting (metal telephone or light posts, fences, etc.).

**NOTE**

The transceiver will operate into an SWR of 2 to 1 indefinitely and sustain an SWR of 20:1 for a maximum of 5 minutes at rated operating conditions.


**EXTERNAL SPEAKER**

The external speaker jack (EXT.SPK) on the rear panel is used for remote receiver monitoring. The external speaker should have 8 ohms impedance and be able to handle at least 4 watts. When the external speaker is plugged in, the internal speaker is disconnected.

# Operation

**CONTROL FUNCTIONS**

There are seventeen controls and five indicators on the front panel of your transceiver.

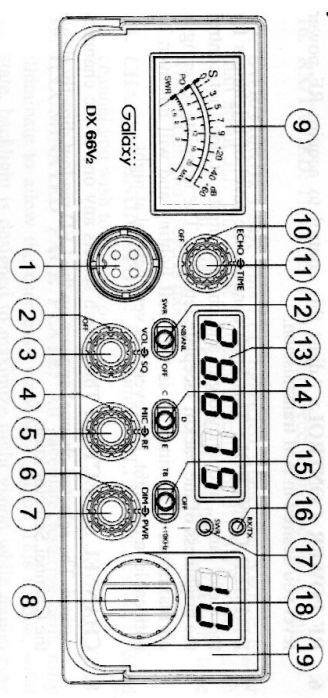


**FRONT PANEL**

1. **MICROPHONE JACK:** Used for connecting a microphone for voice source.
2. **SQUELCH:** This control is used to cut off or eliminate receiver background noise in the absence of an incoming signal. For maximum receiver sensitivity it is desired that the control be adjusted only to the point where the receiver background noise or ambient backgrounds noise is eliminated. Turn fully counterclockwise then slowly clockwise until the receiver noise disappears. Any signal to be received must now be slightly stronger than the average received noise. Further clockwise rotation will increase the threshold level, which a signal must overcome in order to be heard. Only strong signals will be heard at a maximum clockwise setting.
3. **OFF/ON/VOLUME:** Turn clockwise to apply power to the unit and to set the desired listening level. During normal operation, the VOLUME control is used to adjust the output level obtained either at the transceiver speaker or the external speaker, if used.
4. **RF GAIN CONTROL:** Use to reduce the gain of the RF amplifier under strong signal conditions.

5. **MIC GAIN CONTROL:** Adjust the microphone gain in the transmit and PA modes. This controls the gain to the extent that full talk power is available several inches away from the microphone.
6. **RF POWER CONTROL:** Adjust this control to acquire RF power level you desired in AM transmission.
7. **DIMMER CONTROL:** This knob controls the level of brightness for the meter lamp, frequency digits and channel digits. It does not control the brightness of the backlit faceplate lettering. The faceplate lettering is on maximum at all times. It is very soft lighting and will not even be noticeable in daylight. However, it is very helpful at night.
8. **CHANNEL SELECTOR:** This switch selects any one of the channels desired. The selected channel appears on the LED readout directly above the Channel Selector knob.
9. **METER:** This meter indicates received signal strength, transmitter RF output power and SWR level.
10. **TIME CONTROL:** This control is used to set the interval of the echo effect.
11. **ECHO CONTROL:** This control is used to echo effect and intervals of echo sound.
12. **OFF/SWR/NB-ANL SW :** In The NB-ANL position, both the Noise Blanker and the Automatic Noise Limiter circuits are activated. When the switch is in the "SWR" position, the meter indicates the Standing Wave Ratio (SWR) of your antenna when you transmit instead of indicating Power Output. No adjustments are required because the SWR circuit in this radio calibrates itself automatically. In the OFF position all of these circuits are off. The NB-ANL and SWR features cannot both be used at the same time.
13. **FREQUENCY COUNTER:** This blue illuminated display indicates the frequency of the selected channel.
14. **BAND SELECTOR:** This switch selects C,D,E band of operation.

15. **OFF/TALKBACK/+10KHZ SWITCH:** In the TALKBACK position, the Talkback circuit is activated. In the +10KHz position, the radiic frequency jumps up 10KHz. The SWR Led will light blue to remind you that you are up in frequency. In the OFF position all of these circuits are off. The TALKBACK and +10KHz features cannot both be used at the same time.
16. **RX/TX LED:** This LED is blue during receive and red during transmit.
17. **SWR/+10KHz LED:** This LED lights red when your SWR is higher than about 3:1. This is not an exact indicator of 3:1 SWR, but it is an indication that you should check your SWR reading. LED light blue when turning on +10KHz mode.
18. **CHANNEL INDICATOR :** The numbered LED indicates the selected channel you wish to operate on.
19. **ILLUMINATED FACE PLATE:** All faceplate lettering will fully illuminate to allow the user easy viewing at night. This unique, solid state, backlight is designed to maximize night vision while minimizing eye fatigue. Therefore, it is ideal for switch and control recognition day or night.

## REAR PANEL

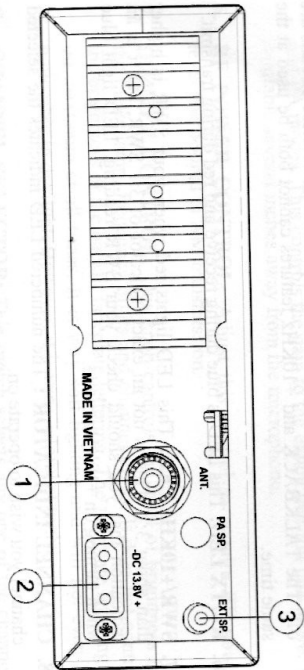

1. **ANTENNA.** Accepts 50 ohm coaxial cable with a type PL-259 plug to be connected.
2. **POWER.** Accepts 13.8V DC power cable with built-in fuse (10 amp.) to be connected. The power cord provided with this radio has a red and a black wire. The black goes negative and the red goes to positive.
3. **EXT SP.** Accepts 4 to 8 ohms, 5 watt external speaker to be connected. When external speaker is connected to this jack, the built-in speaker is automatically disconnected.

## PRESS-TO-TALK MICROPHONE

The receiver and transmitter are controlled by the press-to-talk switch on the microphone. Press the switch and the transmitter is activated, release switch to receive. When transmitting, hold the microphone two inches from the mouth and speak clearly in a normal "voice". The radios come complete with low-impedance (500 ohm) dynamic microphone. For installation instruction on other microphones, see next section, "ALTERNATE MICROPHONES AND INSTALLATION".

## OPERATING PROCEDURE TO RECEIVE

1. Be sure that power source, microphone and antenna are connected to the proper connectors before going to the next step.
2. Turn unit on by tuning **VOI** control clockwise on your transmitter.
3. Set the **VOLUME** for a comfortable listening level.
4. Set the **MODE** switch to the desire mode.
5. Listen to the background noise from the speaker. Turn the **SQUELCH** control slowly clockwise until the noise **JUST** disappears (no signal should be present). Leave the control at this setting. The **SQUELCH** is now properly adjusted. The receive will remain quiet until a signal is actually received. Do not advance the control too far, or some of the weaker signals will not be heard.
6. Set **CHANNEL** selector switch to the desired channel.
7. Set the **RF** gain control fully clockwise for maximum **RF** gain.

## OPERATING PROCEDURE TO TRANSMIT

1. Select the desired channel of transmission.
2. Set the **MIC GAIN** control fully clockwise.
3. If the channel is clear, depress the push-to-talk switch on the microphone and speak in a normal voice.

## ALTERNATE MICROPHONES AND INSTALLATION

For best results, the user should select a low-impedance dynamic type microphone or a transistorized microphone. Transistorized type microphones have a low output impedance characteristic. The microphones must be provided with a four-lead cable. The audio conductor and its shielded lead comprise two of the leads. The fourth lead is for receive control, and the third is for transmit control. The microphone should provide the functions shown in schematic below:

| 4 WIRE MIC CABLE |                  |
|------------------|------------------|
| Pin Number       | Mic Cable Lead   |
| 1                | Audio shield     |
| 2                | Audio Lead       |
| 3                | Transmit Control |
| 4                | Receive Control  |

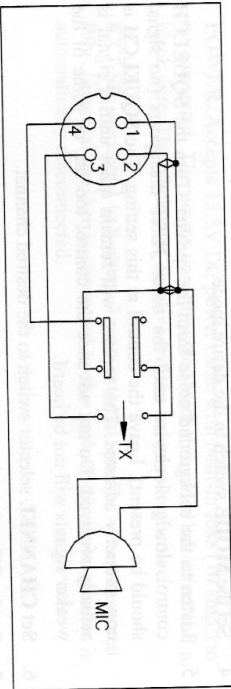


Fig. 1 Your transceiver microphone schematic.

If the microphone to be used is provided with pre-cut leads, they must be revised as follows:

1. Cut leads so that they extend 7/16" beyond the plastic insulating jacket of the microphone cable.
2. All leads should be cut to the same length. Strip the ends of each wire 1/8" and tin the exposed wire.

Before beginning the actual wiring read carefully, the circuit and wiring information provided with the microphone you select. Use the minimum head required in soldering the connections. Keep the exposed wire lengths to a minimum to avoid shorting when the microphone plug is reassembled.

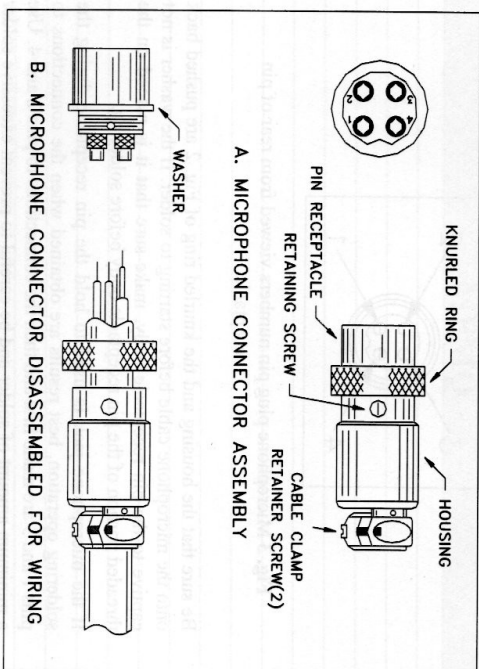


Fig. 2 Microphone plug wiring

1. Remove the retaining screw
2. Unscrew the housing from the pin receptacle body
3. Loosen the two cable clamp retainer screws.
4. Feed the microphone cable through the housing, knurled ring and washer as shown Fig. 2.
5. The wires must now be soldered to the pins as indicated in the above wiring tables. If a vise or clamping tool is available it should be used to hold the pin receptacle body during the soldering operation, so that both hands are free to perform the soldering. If a vise or clamping tool is not available, the pin receptacle body can be held in a stationary position by inserting it into the microphone jack of the front panel. The numbers of the pins of the microphone plug are shown in Fig. 3, as viewed from the back of the plug. Before soldering the wire to the pins, pre-tin the wire receptacle of each pin of the plug.





**MEMO**

*[Handwritten text is extremely faint and illegible in this image.]*

**MEMO**

*[Handwritten text is extremely faint and illegible in this image.]*

**WARRANTY**  
 This radio is covered by a two  
 year Limited parts and labor  
 warranty.

- "limited" means that we will repair problems caused by factory defects or normal use at no charge.
- Before returning a radio to us for warranty service, please call our Service Department for a Repair Authorization Number (RAN). This RAN must be written below your return address on the outside of the shipping box. Boxes, which arrive without an RAN, will be refused, and the shipping company will return the unopened box to you. Be sure to have a pen and paper ready along with the serial number of your radio before calling. We will give you the RAN and our shipping address over the phone. The telephone number of the Service Department is (760) 480-8800, and we suggest calling between 10:00 AM and 4:00 PM Pacific Time.
- Please include a note with a detailed description of the symptoms. This is important because it will help the technician who works on your radio to locate your problem. Intermittent problems are easily overlooked, so be sure to give as much detail as possible in your note. Also, please include your daytime telephone number in case our technicians have any additional questions.
- Do not send your power cord or microphone unless we ask for these items during our telephone conversation.
- You are responsible for getting the radio safely to us. (We suggest using United Parcel Service.) You must pay to ship the radio to us, and we will pay to ship the radio back to you. Since we use UPS and they do not ship to Post Offices boxes, please provide us with a street address for the return of your radio.
- We will repair and return your radio as soon as we can. We appreciate your choosing a Galaxy radio and we want you to be on the air as much as possible!  
 Be sure to visit our web site at

**[www.GalaxyRadios.com](http://www.GalaxyRadios.com)**

**MEMO**

Lined area for taking a memo.