

SPECIFICATIONS

GENERAL	
FREQUENCY RANGE:	0.5MHz ~ 50MHz
RESOLUTION:	100Hz
STABILITY:	±0.01ppm @ 25°C
DISPLAY:	6 digits super brt. LED
LED COLOR:	RT=Red / BT=Blue
DIMMER CONTROL:	3 steps DIM/BRT
DIMENSION:	L103 x W114 x H33 mm
WEIGHT:	275 gm
EXTERNAL INPUT	
SENSITIVITY:	0.1 ~ 1V Max.
RF SIGNAL:	Direct Reading
POWER SUPPLY:	DC 13.8V ±5% NEG GND.
INTERNAL INPUT	
R T / X frequency:	10.695MHz Built-in adder
SSB frequency:	Auto Correction
PACKAGE CONTENTS	
●	Mounting Bracket x 1
●	Mounting Bracket Screw Knob x 2
●	Mounting fixing self-tape screw x 2
●	Mounting spacer washer x 2
●	External DC Power cord/car lighter plug x 1
●	User Guide x 1

FREQUENCY COUNTER

Models


FC30-RT / FC30-BT
Auto Dual Inputs



USER GUIDE


OPERATION

Front Panel

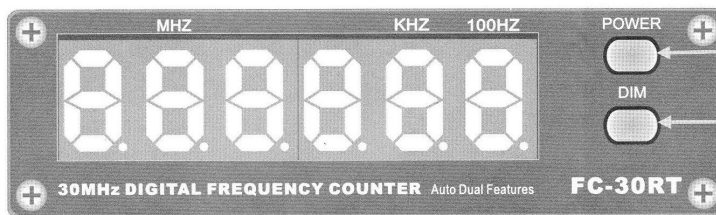

Measures contacted RF signal or TX signal from ant. Range up to 50Mhz, Input Level from 0.1~1V Max.

Rear Panel

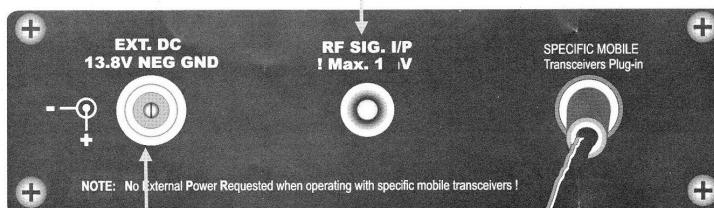

Accepts EXT. DC power only measures EXT. signal.

CONTROLS & FUNCTIONS

- Depress Power SW ON/OFF
- Selects Display Brt. Dim Levels Hi – Mid – Lo.
- Initial Power On stays at Mid Dim Level.
- Press 3 interval steps for Dim & Bright Level.

Measures Receive & Transmit frequencies, accepts 6 Pin Header socket from specific mobile transceivers with -10.695MHz IF VCO signal output.

CAUTION:
DO NOT PLUG-IN EXT. DC POWER WHILE SPECIFIC TRANSCEIVER IS IN USE. OTHERWISE, WILL OVER RIDE FROM INT. TO EXT. INPUT.